



Zmiana ustawień DHCP Asmax 901


Wpisujemy w przeglądarce adres 192.168.1.254

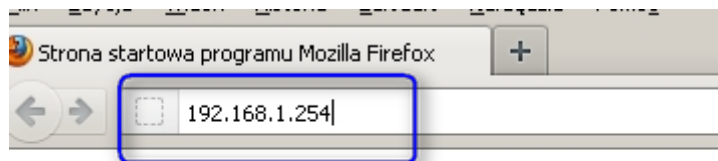

Wpisujemy nazwę użytkownika oraz hasło: admin:

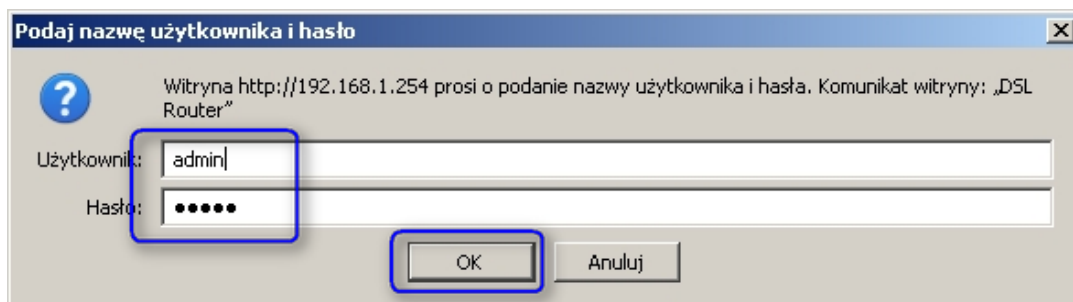

Po zalogowaniu przechodzimy do zakładki Advanced Setup i klikamy na LAN

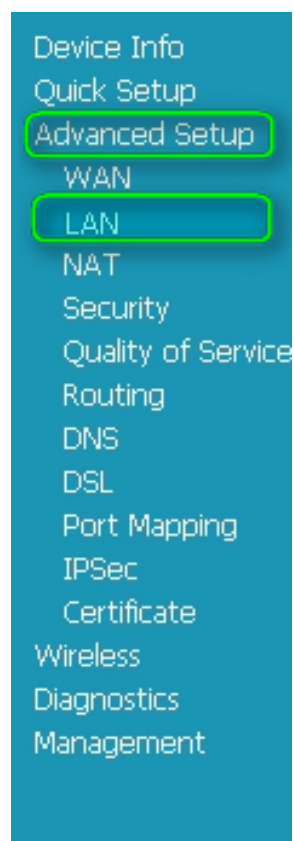

Wpisujemy adresy IP, które mają być propagowane przez DHCP

IP address – adres IP routera (bramy) , np. 10.0.0.254

Start IP address – początkowy adres IP np. 10.0.0.1

End IP address – końcowy adres IP np. 10.0.0.253

The screenshot shows the 'Local Area Network (LAN) Setup' page. On the left is a navigation menu with 'Advanced Setup' and 'LAN' highlighted. The main content area contains the following fields and options:

- IP Address: 192.168.1.254
- Subnet Mask: 255.255.255.0
- Host Name: netiabox
- Domain Name: pl
- Enable UPnP
- Enable IGMP Snooping
- Standard Mode
- Blocking Mode
- Disable DHCP Server
- Enable DHCP Server
 - Start IP Address: 192.168.1.2
 - End IP Address: 192.168.1.253
 - Subnet Mask: 255.255.255.0
 - Leased Time (hour): 24

Po wpisaniu adresów IP klikamy przycisk Save, następnie Save/Reboot. Po chwili router wyłączy się i włączy ponownie już z nowymi ustawieniami.

This screenshot shows the same configuration page as above, but with additional annotations. At the bottom left, two buttons are shown: 'Save' (labeled with a blue '1') and 'Save/Reboot' (labeled with a blue '2'). A blue arrow points from the 'Save i Save/Reboot' text to the 'Save/Reboot' button in the bottom right corner of the configuration page. The configuration fields are the same as in the previous screenshot.